 
 


Deltaco TALA Enkel

Easy to use mobile phone

EN User manual

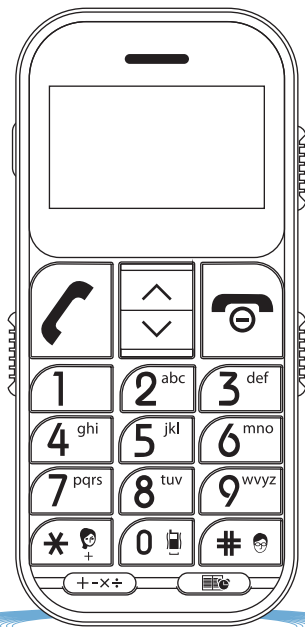

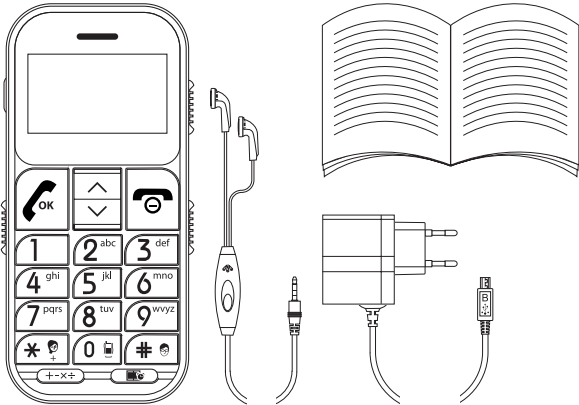

Welcome to your now DELTACO ENKEL mobile phone. It is designed for being easy to use and yet have some practical safety features.

Support





If you experience any problem installing or using this mobile phone, don't hesitate to contact us. We appreciate it if you have the information regarding your phone model at hand.

 
Contact us by email: help@deltaco.eu.

More product and support information can be found at www.deltaco.eu.

Safety Instructions

These instructions are intended for the safe and effective use of your phone. Please follow these guidelines. Failure to do so might cause the product to malfunction, or even cause a potential hazard to your health.

	Do not use your mobile phone while driving. Park the car before making or answering a call.
	Turn off your phone when refueling. Do not use your phone near a gas station, flammable, or chemical substances. Warning! It may explode when exposed in fire.
	Do not use your phone during a flight. Wireless devices can cause interference in the aircraft.
	Do not use your phone near medical equipments like pacemaker without requesting permission from the physician or medical staff.

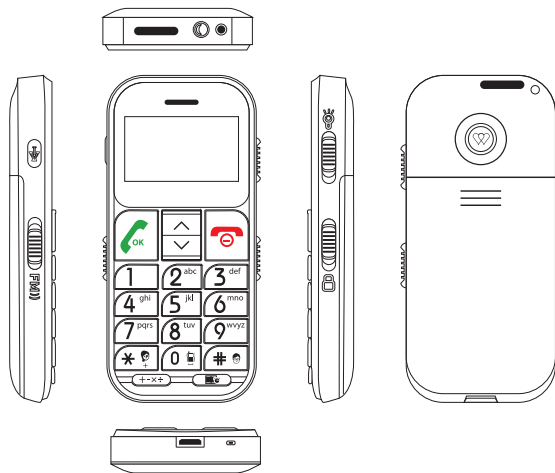

Use the control buttons to do the following:



- Talk/OK key

- Press to make or receive a call.
- Press in standby mode to display the call list.
- OK key: Press to open the selected function or to confirm a selection.
- The current function of the key is often written on the screen above the key.





 
 
- Talk/OK key

- Power On/Off: Press and hold for 3 seconds to turn the phone On or Off.
- Press to end or reject a call.
- Press to open phone book
- Press to return to the previous screen.
- The current function of the key is often written on the screen above the key.



- Navigation keys

In standby mode:

- Press  key to open the phone menu and then press  or  keys to browse the menu options.
- Press  key to write message.

In a call, press  or  key to adjust the volume of the receiver.



- Handsfree key (left side button)

During a call, press to turn On/Off the Handsfree mode.



- FM Radio switch (left side slide switch)

In standby mode, slide the switch upward to open the FM radio. Slide the switch downward to exit the radio.



- Torch switch (right side slide switch)

Slide the switch upward to turn on the light. Slide downward to turn off.



- Keypad lock/unlock switch (right side slide switch)

Slide the switch upward to lock or downward to unlock the keypad.



- SOS key (Located at the back side)

Press and hold anytime to activate the Emergency alarm function.



- Vibrate mode [0] on/off key

In standby mode, press and hold until a message on the screen is displayed, to turn the vibrate mode to On or Off.



- Voicemail key [1]

Press and hold in standby mode to dial the programmed Voice mail number.



- Speed dial [2] – [9], [*], [#] keys

Press and hold in standby mode to automatically dial the stored speed dial number.

Phone controls

- Calculator key

Press to open the calculator home menu.


- Event remind key


Press to access the Event remind menu.


Screen icons

 - **Network signal strength**
The more the stripe is, the stronger the signal is. When SIM card is inserted in card slot, standby screen will show the icon.


 - **Battery strength**
The full the fill is, the more electric quantity is. Standby screen will show the icon.

 - **Alarm clock on and off**
It means that alarm clock is set and started. If alarm clock is set as off, the icon will disappear automatically.


 - **Unread SMS**
When there is unread SMS in the inbox, standby screen will show the icon. When the SMS capacity is full, the icon will not stop twinkling.

 - **Missed call**
When there is missed call, standby screen will show the icon.

 - **Ringing**
When scene mode is set as ringing, standby screen will show the icon.

 - **Vibrating**
When scene mode is set as vibrating, standby screen will show the icon.

 - **Vibrating and ringing**
When scene mode is set as vibrating and ringing, standby screen will show the icon.

 - **Mute**
When scene mode is set as mute, standby screen will show the icon.

 - **Earphone mode**
When normal wired earphone connects with the phone, standby mode will show the icon.

Preparation before use

Installing the SIM card

The Subscriber Identity Module (SIM) card identifies you to the mobile network. Your phone will not fully work without the SIM card.

- Remove the battery cover by pushing it downwards.
- Insert the SIM card into the slot with the copper contacts facing down and the cut corner on the rear end.
- To remove an already-installed SIM card, pull the SIM card gently using your thumb.

Installing the battery

Insert the battery. Make sure that the terminals on the battery align with the metal contacts on the phone. Replace the battery cover. Push it upward until it locks into place.

Charging the battery

- Connect the AC adapter plug to an electrical outlet and connect the other end to the USB port at lower side of the phone.
- When the power comes on, "Charging..." will be displayed on the LCD screen, and the charge indicator will start to scroll. It will only stop after the battery comes to full charge.
- If a battery is completely discharged, it may take a few minutes before the charge indicator appears on the LCD screen.
- To fully charge when the phone is discharged, keep charging for at least three hours.
- After the battery charge comes to full, disconnect the charger from phone and the socket of the alternating current.
- Do not take out the battery while it is being charged. Personal data and settings in your phone and SIM card might be lost when you take out the battery.

Power ON/OFF

Press and hold  for about 3 seconds to turn on or power off your phone.










 
 
Security number

PIN (Personal Identity Number), is usually provided to a SIM card by the network operator. If you enter a wrong PIN three times in a row, it will be locked. You need to enter your PUK (Personal Unblocking Key) number to unlock. Please contact your SIM network operator for more details.

PUK (Personal Unblocking Key) is used to unblock the PIN. PUK code is provided to a SIM card. If you lose or forget the password, call your network operator.

General features



Make a call by dialing

- Dial the number** In standby mode, enter a phone number and press  *Option*, select *Dial* and  *Accept* to dial out the number. If you happen to enter wrong digit, press  to delete it.
- Dial from contacts** In standby mode, press  to display the phonebook list. Browse the number you want to call and then press  *Option*, select *Dial* and press  *Accept* to dial the selected contact.
- Dial from the call list** Press  in standby mode. The call lists will be displayed. Select Outgoing, Incoming or Missed calls and press  *Accept*.
- Brows to the number you want to call press  *Option*, select *Dial* and press  *Accept* to dial the selected contact.
- Speed dial** To make a Speed dial call; In standby mode, press and hold the corresponding Speed dial key. You could also press the Speed dial key and then press  *Accept* to dial.

Answer a call

When a call comes in, the phone will ring and/or vibrate according to your profile setting. It will show the caller's name if the network supports it. The caller's name display depends on whether you have saved it in your phonebook. Press  *Accept* to answer.

In call options:



- Turn on the Handsfree mode** Press Handsfree key to turn on the speakerphone. Press Handsfree key again to return to normal talk mode.
- Mute a call** Press  *Options*, down to *Mute* and press  *Accept* to mute the call. Do the same way to unmute the call later.

Options when receiving a call:

- Turn off the Ringer** Press  *Mute* to turn off the ringer.
- Reject a call** Press  *End* again to reject the call.

General features

To end a call conversation

When you have finished talking, press  *End* to end a call. You can also press  *End* if you want to terminate a call after you dialed.

To make an international call

To make an international call, press [*] key repeatedly until a "+" sign appears on the screen. Enter the country code, area code (without the first zero), and the phone number: For example; Enter 49 for Germany, 44 for UK, 86 for China. Enter +8612345678910, when making an international call to China.

Adjusting the call volume

During a phone conversation, press  or  key to adjust the volume of the earpiece.

Keypad lock







The Keypad lock function prevents an accidental pressing of keys that causes unnecessary operation of your phone. In standby mode, slide the *Keypad lock* switch upwards to lock the keypad. Slide it downward to unlock.

Torch light



At any user mode, slide the *Torch switch* upward to turn on the light. Slide the switch downward to turn off.

Phone functions in standby mode

With phone in standby mode, you can access the following functions:







 

- Phone Menu** Press  to open the phone home menu. Press  or  key to browse the list.
- Contacts** Press  to access the phonebook entries.
- Call lists** Press  to display the call lists.
- Write message** Press  to access the write message home.
- Emergency call** Press and hold *SOS* key to activate the Emergency alarm, the phone will emit an alarm tone, sends the SMS alert and make a call to the programmed Alarm number/s.

Note: You need to setup the Emergency call numbers in memory before using this function, see Emergency> Alarm number setting page of the user manual.







 
In standby mode, press  or press  and then select *Phonebook* to view the contact list in your phonebook.


Adding new contact

Add a new contact to the Phone or SIM memory.

- 1 In the Phonebook list home, press  *Option* and browse to *Add contact*, and press  *Accept*.
- 2 Select the memory location; *Save to SIM* or *Save to ME* and press  *Accept*.
- 3 Press  *Edit* and then input the name. Press  *Accept* to confirm.
- 4 Browse down to number. Press  *Edit* and input the number, then press  *Accept* to confirm.
- 5 The record has been stored to your contact list. Press  *Back* to return to the Phone book or stand by mode.

To program the Speed dial numbers



- 1 In the Phonebook list home, press  *Option* and scroll down to *Advanced* and press  *Accept*.
- 2 Select *Speed dial* and press  *Accept*.
- 3 Select a Speed dial key location 2~9, *, or # key and press  *Accept*.
- 4 Select *Set/Change* and press  *Accept*.
- 6 Browse the phonebook record you wish to assign and then press  *Accept* to save. Press  *Back* to return to the Phone book or stand by mode.



To make a Speed dial call; In standby mode, press and hold the corresponding Speed dial key. You could also press the Speed dial key and then press  *Accept* to dial.

Quick search

In the Phonebook list home, press a letter key (A~Z) that corresponds to the first letter of a name, and the display screen will jump to the first entry beginning with that letter.

Phonebook list

In the Phonebook list home, press  or  key to scroll through the list. Press  *Option* to do the following;

Dial	To call the selected contact
Detail/ Edit	To display the name and the number of the contact. On the display, press  <i>Option</i> to <i>Edit</i> , <i>Send message</i> , or <i>Call</i> the selected contact.
Delete	To delete the selected contact. Press  <i>Accept</i> to confirm
Send message	To send a message to the selected contact.
Add contact	To add a new contact
Move	To move the selected contact from SIM to Phone memory or vice versa. An icon shows the current location.
Advanced	Select to do the following Options;

Speed dial: To program the speed dial numbers on the keys2~9, *, and # location.

Own number: To store the telephone number of your SIM card.
Storage status: To view the status of phonebook memory storage of the SIM and Phone.

Copy: To copy all contacts from SIM to phone or reversed.


 





Move contacts: To move all contacts. Select; *SIM to phone* or *Phone to SIM*.

Delete all entries: To delete all phonebook entries from SIM or phone memory.

Copy to SIM / phone	To copy the selected record from SIM to Phone memory or vice versa.
---------------------	---

SMS message, also known as “text” message is a network service, which enables you to send, receive, and edit text messages from your mobile phone.

Create message



- 1 In standby mode, press  to open the message editing function directly. Or press  and browse to *Messaging* and select *Create message*.
- 2 Type your message. As you type, you'll be able to track how many characters you're creating
 - Press # key repeatedly to set the text input mode; abc, Abc, ABC, or 123.
 - If the next letter you want is located on the same key as the present one, wait until the cursor is shown and key in the letter.
 - To insert a space, press [0] key.
 - To add a symbol, press [*] key, scroll to the character and then press  *Accept* to input.
 - Press  *Delete* to erase a wrong input, press and hold  *Delete* to erase the whole entry.
 - Press  or  to move the cursor on the message edit screen.

Press  *Option* to do the following:

Send	Sends the message by dialing the recipient number or search the recipient from the phonebook list.
Only save	To save the message in the Draft memory
Templates	To insert a pre-drafted template message

- 3 Press  *Option*, select *Send* to send out the message.

Inbox

All SMS messages that you have received are stored in the Inbox memory. When a message comes in, a new message alert will prompt and a message tone will be heard depending on the current phone profile setting. Press  *Select* to open the incoming folder and then press  *Accept* to read the content of the message.




With the phone in standby mode, press  and then browse to *Messaging* and then *Inbox* to access the Incoming message list. A closed mail icon indicates an unread message while an open mail icon means that the message has been viewed.

To view the content of the message, press  *Accept*. Press  or  to move the display upwards or downwards.

Also, you can press  *Option* to do the following:

Text Reply	To reply the message sender.
Dial back	To call the message sender.
Forward	To forward the message to other number/s.
Delete	To delete the selected message.
Save Number	To save the selected record into the phonebook list.




Outbox

The message that you have sent out will be automatically stored in the Outbox memory. In the Messaging home menu, select *Outbox* to access the outbox message list. Press  or  to browse the list and press  *Accept* to view the message content.

While in the message view, press  *Option* to do the following:

Forward	To forward the message to other number.
Delete	To delete the selected message.
Save Number	To save the selected record into the phonebook list.

Draftbox

The message that you have opted to save by selecting “Only save” in the write message option is stored in the draftbox memory. In the Messaging home menu, select *Draftbox* to access the draftbox message list  or  to browse the list and then press  *Accept* to view the content.

In the message view, press  *Option* to do the following:

Forward	To forward the message to other number.
Edit	To edit the content of the message and later have the option to send or save it anew.
Delete	To delete the selected message.


Message setup

In the Messaging home menu, select *Message setup* to set or view the following options:

Auto save SMS	Select the “on”, to automatically save sent text messages departure boxes.
Storage status	Displays the status of the SIM and phone message memory.
Storage media	Sets the memory storage location; SIM or Phone.
Delete all messages	The messages will be saved until you explicitly delete them. You can have the following options when deleting all messages;
Delete inbox messages	To delete all messages in the inbox memory.
Delete outbox messages	To delete all messages in the outbox memory.
Delete draftbox messages	To delete all messages in the draftbox memory.


Your phone records the Incoming calls, Outgoing calls and Missed calls. In standby mode, press  to open Call History. Browse to the selected category and open it with  *Accept*.

Outgoing Calls

Show the list of phone numbers that you have recently dialed or attempted to call. Browse to the selected number and then press  *Option* to do the following:

Dial	Calls back the selected record.
Detail/ Edit	To view the call information such as; the telephone number, the date, and time of the call.
Send message	Sends message to the selected record.
Save Number	To save the selected record into the phonebook list.
Delete	To delete the selected record.


Incoming Calls

Shows the list of incoming call records that you have answered. Browse to the selected number and then press  *Option* to do the following:

Detail/ Edit	To view the call information such as; the telephone number, the date, and time of the call.
Dial	Calls back the selected record.
Send message	Sends message to the selected record.
Save Number	To save the selected record into the phonebook list.
Delete	To delete the selected record.

Call history

Missed calls

Shows the list of incoming call records that you have failed to answer. Browse to the selected number and then press  *Option* to do the following:

Detail/ Edit	To view the call information such as; the telephone number, the date, and time of the call.
Dial	Calls back the selected record.
Send message	Sends message to the selected record.
Save Number	To save the selected record into the phonebook list.
Delete	To delete the selected record.

Delete call logs


You can have the following options when deleting all the call logs;

Missed call	To delete all of the call records in the missed call memory.
Dialed call	To delete all of the call records in the dialed call memory.
Received call	To delete all of the call records in the incoming call memory.
Delete all	To delete all of the call records.

Call duration

Shows the elapsed time of the Last call, Dialed call, and the Received call. Select *Reset all* to reset the time count back to zero.

Settings

You can set the general functionality of your phone. Press  key and then select *Settings*.

Phone settings

In the Settings home menu, select *Phone settings* to set the following;

Time and date

Set the time and date.



- 1 In the Settings home menu, select *Phone settings*>*Time and date*.
- 2 Input the time.
- 3 To correct a wrong entry, press *Up* or *Down* keys to move the cursor to the number and then edit the entry.
- 4 Press *Accept*. Input the date.
- 5 Press *Accept* to confirm the setting.

Language

Set the operating language of your phone. In this phone English; Swedish, Finnish, Danish and Norwegian are available.

Schedule power on/off

You can set your phone to automatically turn On or Off in according to the time setting schedule.

- 1 In the Settings home menu, select *Phone settings* and then *Schedule power on/off*.
- 2 Select; *Auto Power On* or *Auto Power Off*.
- 3 Select *Time settings* and then input the time schedule.
- 4 Press  *Accept*.
- 5 Move the control to *Activate* or *Deactivate* and then press  *Accept*.

Backlight

Set the time duration when the backlight of the lcd screen to turn off. Select; *Always on*, *Always off*, *10 seconds on*, *15 seconds on*, or *30 seconds on*. Press  *Accept* to confirm the selected option.

Call settings

In the Settings home menu, go to *Network settings* to select *Manual* or *Automatic* selection of network. Automatic works well at home and Manual could be useful for selecting the cheapest operation when abroad.

Settings



Sounds

Sets the ring tones and the ring volume level of your phone. In the Settings home menu, select Sounds to set the following;

Ringtones

Ringing tone	Select to set the ring tone when receiving an incoming call. A ring tone sample will play when toggling from one ring tone to another. Press <i>Accept</i> to confirm your selection.
SMS alert tone	Select to set the ring tone when receiving a message. Press <i>Accept</i> to confirm your selection.
Power on/off tone	Select to turn the power on/off ring tone to On or Off. Set to On to enable the ring tone sound when the phone turns on or off. Press <i>Accept</i> to confirm your selection.
Alarm clock	Select to set the alarm tone. Press <i>Accept</i> to confirm your selection.
Keypad tone	Select to turn keypad tone to On or Off. Set to On to enable the key tone sound when pressing the keys. Press <i>Accept</i> to confirm your selection.
Alert type	Select to set the alert type; Ring only, Vibrating alert, Vibrate and ring, or Silent. Press <i>Accept</i> to confirm your selection.
Volume	Select to set the volume level of the call ring, and the key tone.
Ringing volume	You can adjust the ringing tone Volume to your comfortable loudness level. Press or to adjust volume level setting. Exit with .
Key volume	To adjust the key tone volume sound level. Press or to adjust volume level setting. Exit with .

SIM lock

Here you can setup if your SIM card should be locked and request PIN code when starting the phone or not. To change this setting you have to enter the PIN code and press *Accept*. If your SIM card is locked it will be unlocked and vice versa.

Settings



Time voice

You can set your phone to announce the time. Press Settings>Time voice to open the menu and set the following;

ON/OFF	Select to enable or disable the time voice function.
Alert type	Select If you want the phone to announce time each whole or each half hour. Set with <i>Accept</i> .
Time setting	Select to input the time reference in HH:MM, 24-Hour time format. Press <i>Accept</i> to confirm

Number voice

You can set your phone to talk as you press the number. Select Enable or Disable and press *Accept*.

Note: When the Silent mode is activated, the Number voice will not activate even if the function is enabled.

Factory default

Select to reset the phone settings back to factory default.


The password is **0000**


Select to reset the phone settings back to factory default.

To do list

You can set and store events in your phone and get alerted according to the alert type setting you choose. Press Event remind key in standby mode to directly access the function.

To setup an event

- 1 In the To do list home menu, select the event memory location. There are 3 available memory location to choose from and press  *Accept*.
- 2 Set the following options;









ON/OFF	To turn On or Off the selected To do list memory.
Event text	To write a brief description of the event. The description will prompt on the lcd screen when the event time comes due.
Event time	To input the time schedule of the event.
Alert type	To set the type of receiving the the event alert.
One shot alarm	Choose to receive the alert only once when the event time schedule comes due.
Weekly alarm	Choose to receive the alert in any day of the week or every day. Browse the day and then press [#] key to mark it.
- 4 Press  *Accept* to confirm.

Emergency

Important: You must have to program the 'Alarm number' on the Emergency > *Alarm number* menu. You can store up to 5 Alarm contacts in memory.


During emergency, press and hold *SOS* key at the back side of your phone to activate the Emergency alarm. The phone will emit a loud alarm tone and display the information text. Then it will automatically send SMS alarm to all of the pre-programmed Alarm number/s and calls the pre-programmed Alarm number in polling order. If the first Alarm number contact is unreachable, the phone will redirect the call to the next Alarm number contact and so on.


You can set the following options in the Emergency menu;

Alarm number	To program the Alarm number contacts. You can store up to 5 Alarm number contacts in the memory. Enter the phone number manually or press  <i>Search</i> to add a contact from the phonebook list. Press  <i>Accept</i> to save
Alarm SMS	To program the text content of the Alarm message. Note: A default emergency message has been programmed in memory but user can change in according to his purpose.
Alert text	To program some important information about the phone user. When the Emergency alarm is activated, the Alert text information will display on the lcd screen. Set the following;
Name	To input the name. Press  <i>Accept</i> to save
Blood type	To set the blood type information. Select; A, B, O, AB, or Unknown and then press Accept. Press  <i>Accept</i> to save
Sudden illness	To input the information about possible sudden illness. Press  <i>Accept</i> to save
Relation name	To input the name of a close relative. Press  <i>Accept</i> to save
Relation number	To input the contact number of the close relative. Enter a telephone number or press or press  <i>Search</i> to select number from phone book. Press  <i>Accept</i> to save

Alarm





This function can save three alarms, but the remind time may not be repeated

- 1 Scroll to chosen alarm 1, 2 or 3 and select ON for activating the alarm and press *Accept* to save.
- 2 Set the alarm clock time and press  *Accept* to save.
- 3 Set the alarm type





Ones hot alarm	The alarm will only be activated once at the set time.
Weekly alarm	Select which week days you want this alarm to be repeated. Press [#] to mark selected days
- 4 Confirm with  *Accept*

Calculator

The calculator allows you to carry out simple arithmetic operation (addition, subtraction, multiplication, and division).

- 1 In standby mode, press the *Calculator* key
- 2 Input the first number/s (not more than 9 digits).
- 3 Press  or  to select the arithmetic operation: + - x /
- 4 Press # key to enter a negative sign before the number, or press * key to enter a decimal point.
- 5 Input the second number/s (not more than 9 digits).
- 6 Press  or  to select = (equals sign) to display the result.

Calendar

To view the week days of the calendar, scroll with  or  to a specific date or press  *Search* and enter the date and press  *Accept*.

Your phone is equipped with FM radio. Slide the FM radio switch upward to open or slide it downwards to exit the radio mode.

FM Channel manual search

In the FM radio home, Press  or  to scan for an active FM channel station.

Adjusting the receiver volume

While tuned in to a current channel, press  *Volume* and use  or  to adjust the sound volume level Press  *Accept* to confirm the setting.

To save an active FM channel




To store the presently active FM channel, press  *Option* and scroll down to *New*. You can now edit the frequency or store it with  *Accept*. A manually stored frequency is always stored as number 1 in the list.

FM Channel Auto Search

In the FM radio home press  *Option* and scroll down to Auto Search press  *Accept*. The phone will automatically search for clear FM channels and stores them all in the FM Channel memory.

Note: This operation may take a few minutes.

Changing channels

To show the channel list press  *Option* and scroll down to List and press  *Accept*. The list has 9 positions where the auto scanned channels are stored. By scrolling the list and pressing  *Option* you can choose to listen to, edit or delete the channel.

If you want to create your own channel list this is the easiest way to do it. Select the desired position and edit the frequency.

Phonebook

- Contact list
- Option menu
 - 1 Detail/Edit
 - 2 Dial
 - 3 Delete
 - 4 Send message to
 - 5 Add contact
 - 6 Move
 - 7 Advanced
 - 1 Speed dial
 - 2 Own number
 - 3 Storage status
 - 4 Copy
 - 5 Move contacts
 - 6 Delete all entries
 - 8 Copy to ME/SIM Phonebook

Messaging

- 1 Create Message
- 2 Inbox
- 3 Outbox
- 4 Draftbox
- 5 Message setup
 - 1 Auto save SMS
 - 2 Storage Status
 - 3 Storage media
- 6 Delete all messages

Call history

- 1 Outgoing Calls
- 2 Incoming Calls
- 3 Missed Calls
- 4 Delete call logs
- 5 Call Duration

Settings

- 1 Phone settings
 - 1 Time and date
 - 2 Language
 - 3 Schedule power on/off
 - 4 Backlight
- 2 Call settings
 - 1 Network settings
 - Manual selection
 - Automatic selection

3 Sounds

- 1 Ringtones
 - 1 Ringing tone
 - 2 SMS alert tone
 - 3 Power on/off tone
 - 4 Alarm clock
 - 5 Keypad tone
- 2 Alert type
 - Ring only
 - Vibrating alert
 - Vibrate and ring
 - Silent
- 3 Volume
 - Ringing volume
 - Key volume
- 4 SIM lock
- 5 Time voice
 - 1 On/Off
 - 2 Alert type
 - 3 Time settings
- 6 Number voice
- 7 Factory Default

To do list

Emergency

- 1 Alarm number
- 2 Alarm SMS
- 3 Alert text

Organizer

- 1 Alarm
- 2 Calculator
- 3 Calendar

When the phone automatically turns off or indicates the alarm information of power shortage, please charge the battery in time.

For the first few times, please fully charge the battery before using the phone.

When not in use, please separate the battery with power supply. Overcharging will shorten the life of the battery.

Do not expose your products to extreme high or low temperatures. Do not expose the battery to temperature above +40 °C.

Do not use damaged battery.

Do not expose your mobile phone to direct sunlight or in hot areas. High temperatures can shorten the life of electronic devices.

Do not expose the battery into fire or throw it away. Return the worn-out battery to the provider or put it in the appointed recycle place. Do not throw it in familial rubbish.

EN: help@deltaco.eu

